

9120RM PARTS LIST

<u>#</u>	<u>Description</u>	<u>Stock #</u>	<u>#</u>	<u>Description</u>	<u>Stock #</u>
1.	Carriage Shaft	9150-15	22.	Washer	9100-17A
2.	Carriage	CARR-9	23.	Buttonhead Screw	9100-18A
3.	Wing Nut	SNK-3	24.	Motor Bracket	9120-BRKT
4.	Washer/Bearing Set	BBW-2	25.	Belt Guard Assembly	9120-14
5.	Top Jaw	TJAW-4	26.	Buttonhead Screw	9150-21
6.	Spring	9100-13	27.	Motor Pulley	9120-30
7.	Bottom Jaw	BJAW-4	28.	Snap Ring	9100-21A
8.	Vise Stud	STUD-4	29.	Belt For 9120	9120-BELT
9.	Adjusting Gib Screw	9100-27	30.	Motor Assembly	9120-MOTOR
10.	Copy Dog	9120-13	31.	Cutter Nut	9150-29
11.	Washer	9100-26	32.	Cutter Washers (2)	9100-6
12.	Cap Screw	9100-28	33.	Cutter	CW-23RM
13.	Bearings	9100-21	34.	Gauge Shaft	9100-3
14.	Set Screw	9100-11	35.	Key Gauge	9150-14
15.	Fiber Washer	9100-20	36.	Tieover Bracket	9160-TIE
16.	Machine Pulley	9100-19	37.	Nut	CM-50148
17.	Brush	TYX-3	38.	Screw	9100-17
18.	Cutter Shaft	9160-3	39.	Lock Washer	9100-17A
19.	Brush Nut	9100-25	40.	Standard Tip Gauge	ST-4
20.	Cutter Guard	9100-16	41.	Best/Short Tip Gauge	BT-4
21.	Cap Screw	9100-17			



9120RM

