



SINGLE ROW ROUGH WALL OPENING HEIGHT 1' 5 5/16"		DOUBLE ROW ROUGH WALL OPENING HEIGHT 3' 0 1/8"		
Total No. of Tenants	Total No. of Tenants	Arrangements and No. Boxes in Each Row	Opening Width	
3	6	3	1'- 5 3/8"	
4	8	4	1'-10 7/8"	
5	10	5	2'- 4 3/8"	
6	12	6	2'- 9 7/8"	
7	14	7	3'- 3 3/8"	
8	16	4-4	3'-11"	
9	18	5-4	4'- 4 1/2"	
10	20	5-5	4'-10"	
11	22	5-6	5'- 3 1/2"	
12	24	6-6	5'- 9"	
13	26	6-7	6'- 2 1/2"	
14	28	7-7	6'- 8"	
15	30	5-5-5	7'- 3 5/8"	
16	32	5-6-5	7'-9 1/8"	
17	34	6-5-6	8'- 2 5/8"	
18	36	6-6-6	8'- 8 1/8"	
19	38	6-7-6	9'- 1 5/8"	
20	40	7-6-7	9'- 7 1/8"	

SINGLE ROW ROUGH WALL OPENING HEIGHT 1' 5 5/16"		DOUBLE ROW ROUGH WALL OPENING HEIGHT 3' 0 1/8"		
Total No. of Tenants	Total No. of Tenants	Arrangements and No. Boxes in Each Row	Opening Width	
21	42	7-7-7	10'- 0 5/8"	
22	44	5-6-6-5	10'- 8 1/4"	
23	46	5-6-6-6	11'- 1 3/4"	
24	48	6-6-6-6	11'- 7 1/4"	
25	50	6-6-6-7	12'- 0 3/4"	
26	52	7-6-6-7	12'- 6 1/4"	
27	54	7-7-6-7	12'- 11 3/4"	
28	56	7-7-7-7	13'- 5 1/4"	
29	58	6-6-6-6-5	14'- 0 7/8"	
30	60	6-6-6-6-6	14'- 6 3/8"	
31	62	6-6-6-6-7	14'- 11 7/8"	
32	64	6-6-6-7-7	15'- 5 3/8"	
33	66	6-6-7-7-7	15'- 10 7/8"	
34	68	6-7-7-7-7	16'- 4 3/8"	
35	70	7-7-7-7-7	16'- 9 7/8"	
36	72	6-6-6-6-6-6	17'- 5 1/2"	
37	74	6-6-6-6-6-7	17'- 11"	
38	76	7-6-6-6-6-7	18'- 4 1/2"	

SINGLE ROW MOUNTING

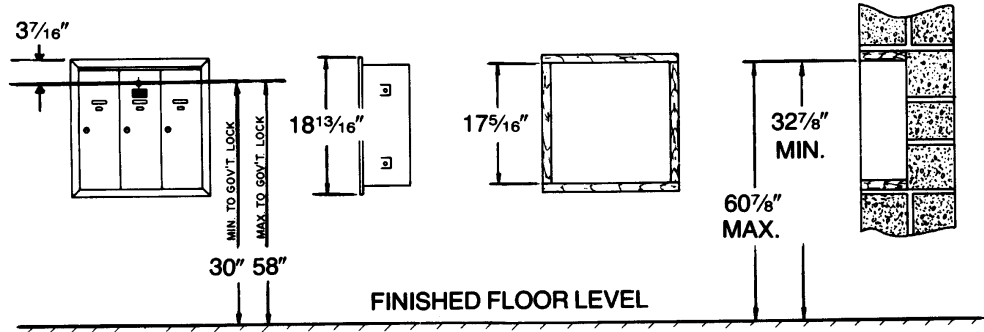

DOUBLE ROW MOUNTING

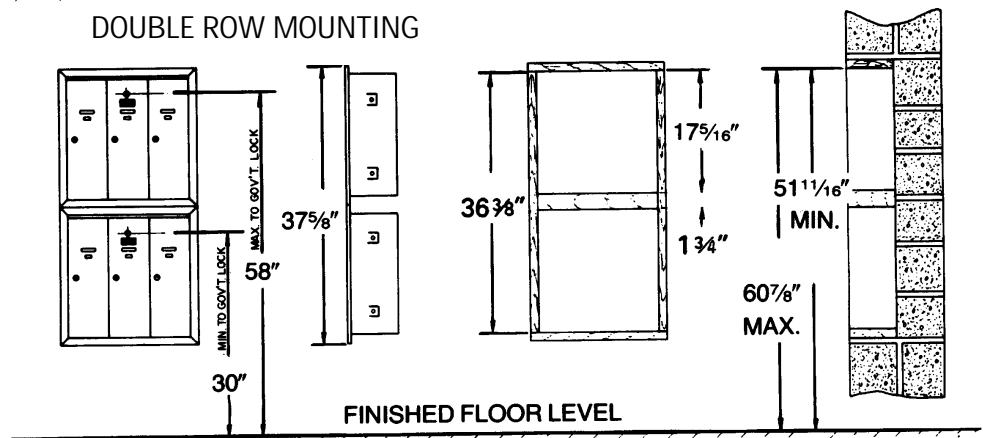

9040 SERIES ROUGH OPENING WIDTH FORMULA:

Multiply total doors wide by 5.5 inches =
 Multiply total units by 2.125 inches..... = +
 Minus - 1.250 inches
 Total rough opening width = inches