
CONGRATULATIONS! YOU HAVE JUST PURCHASED THE FINEST HIGH SECURITY PUSH BUTTON LOCK MONEY CAN BUY

INSTALLATION INSTRUCTIONS for

LEVER HANDLE PUSH BUTTON LOCK

LEVER HANDLE PUSH BUTTON LOCK

- I .THIS PUSH BUTTON LOCK IS MADE FOR RIGHT-HAND DOORS.
 - IF YOU HAVE A LEFT-HAND DOOR, FOLLOW THESE INSTRUCTIONS AND CHANGE THE HANDING SCREW AND SUPPORT ALIGNMENT PIN BY :
 - A) REMOVE 2 BLUE MARKED SCREWS, TAKE OFF RECTANGULAR LID OF THE OUTSIDE LOCK BODY (SEE FIG. 1A)
 - B) PULL UP THE HANDING PIN AND INSERT IT IN THE RIGHT HOLE, AND INSTALL THE SUPPORTING ALIGNMENT PIN FORM LEFT TO RIGHT HOLE.
 - C) RE-SET THE LID WITH TWO (2) ORIGINAL BLUE MARKED SCREWS.
 - D) REMOVE BLUE MARKED SCREW OF INSIDE BODY PLATE (SEE FIG. 1B) AND REPLACE IT IN THE RIGHT HAND HOLE AND FASTENED, IT CHANGES TO LEFT HAND OPERATION.

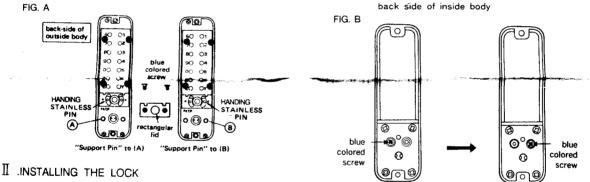


- - A) APPLY THE PROPER TEMPLATE TO THE EDGE OF THE DOOR AND MARK FOR HOLE.
 - B) DRILL ONE 5/16" DIA HOLE, AND ONE 1-7/16" DIA HOLE THRU THE DOOR. DRILL ONE (1) 1" \oint HOLE AT THE DOOR EDGE TO RECEIVE THE MORTISE LATCHBOLT.


INSTALL LATCHBOLT, OUTLINE FACE PLATE OF LATCHBOLT, AND CHISEL OUT AREA TO RECEIVE LATCH FACE.

LATCH FACE SHOULD BE FLUSH WITH THE SURFACE OF THE DOOR EDGE. REINSTALL LATCHBOLT IN " UP " POSITION INTO HOLE AND FASTEN SCREWS.

C) PLACE RUBBER ESCUTCHEON OUTSIDE OF DOOR. INSERT TWO (2) HEXAGONAL LEGS OF THE OUTSIDE LOCK BODY INTO THE HOLES SEE FIGURE 2

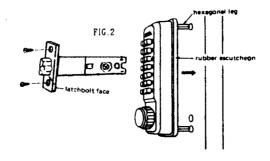

D) SELECT THE PROPER LENGTH SPINDLE AND INSERT THIS IN THE SLOT LOCK BODY FROM OUTSIDE OF THE DOOR. SPINDLE MUST BE INSERTED TO THE SLOT OF THE OUTSIDE LOCK BODY. THROUGH THE LATCHBOLT SEE FIG. 4.

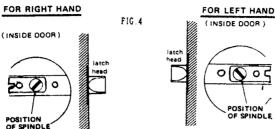


E) SELECT THE PROPER SPINDLE TO FIT DIFFERENT DOOR THICKNESSES.

USE 3" SPINDLE FOR A DOOR 1' TO 1-3/8" THICK.

USE 3-3/8" SPINDLE FOR A DOOR 1-3/8" TO 1-3/4" THICK.

USE 3-3/4" SPINDLE FOR A DOOR 1-3/4" TO 2" THICK.

F) PLACE RUBBER ESCUTCHEON ON INSIDE OF DOOR. INSTALL INSIDE BACK PLATE TO THE DOOR (SEE FIG. URE. 5) AND FASTEN SCREWS. (MAKE SURE SPINDLE ENTERS SLOT OF INSIDE BACK PLATE)

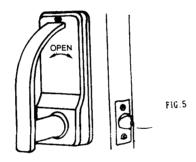

G) CLOSE DOOR, AND DECIDE THE POSITION WHERE LATCHBOLT TOUCHES THE FACE OF DOOR JAM, MAKE HOLE FOR STRIKE AND CHISEL OUT UNTIL STRIKE FACE IS FLUSH WITH SURFACE, THEN REINSTALL LATCH AND FASTEN SCREWS.

II TO OPERATE LOCK.

- A) THE INSIDE IS ALWAYS, OPERABLE BY TURNING THE INSIDE LEVER.
- B) TO UNLOCK, PUSH BUTTON C AND THE SET CODES ON BUTTONS AND TURN THE OUTSIDE KNOB WHICH RETRACT THE LATCHBOLT (IF YOU RESET THE CODE, REFER TO THE ATTACHED SHEET, " HOW TO RESET THE CODE ")
- C) TO LOCK, SIMPLY CLOSE THE DOOR.
- D) TO USE HOLD-OPEN FEATURE. OPERATE LEVER TO HORIZONTAL POSITION SLIDE SWITCH BUTTON TOWARD THE EDGE OF THE DOOR.

REMARK:

- A) ALWAYS PRESS BUTTON " C " (CLEAR) BEFORE USING PUSHBUTTON FOR ENTRY.
- B) ALWAYS PRESS BUTTON " C " (CLEAR) AFTER LOCKING THE DEADBOLT)