


Strike Reinforcement
(See Note 6)

See Note 10

Notes:

1. Do not scale drawing.
2. Dimensions are in inches (mm).
3. LHR door shown. Preparation is typical for both door hands.
4. Minimum door stile width: 4-1/2(114).
5. Prepare mounting holes when installing the device.
6. Unreinforced frames require blind rivet nuts (by others) to mount the strike.
7. Dimension from door face.
8. For recommended door reinforcements see template 7400-0000. Unreinforced doors require SNB option to mount the device components.
9. Holes for optional SNB: 9/32 (7.00) dia. inside door face;
3/8 (9.50) dia. outside door face.
10. Provide door stiffeners as needed to prevent door collapse due to installation with power tools, door use, or abuse.
11. Device mount to hinge stile (not shown) requires hole location and preparation during device installation.
12. For outside trim preparation see appropriate trim template.

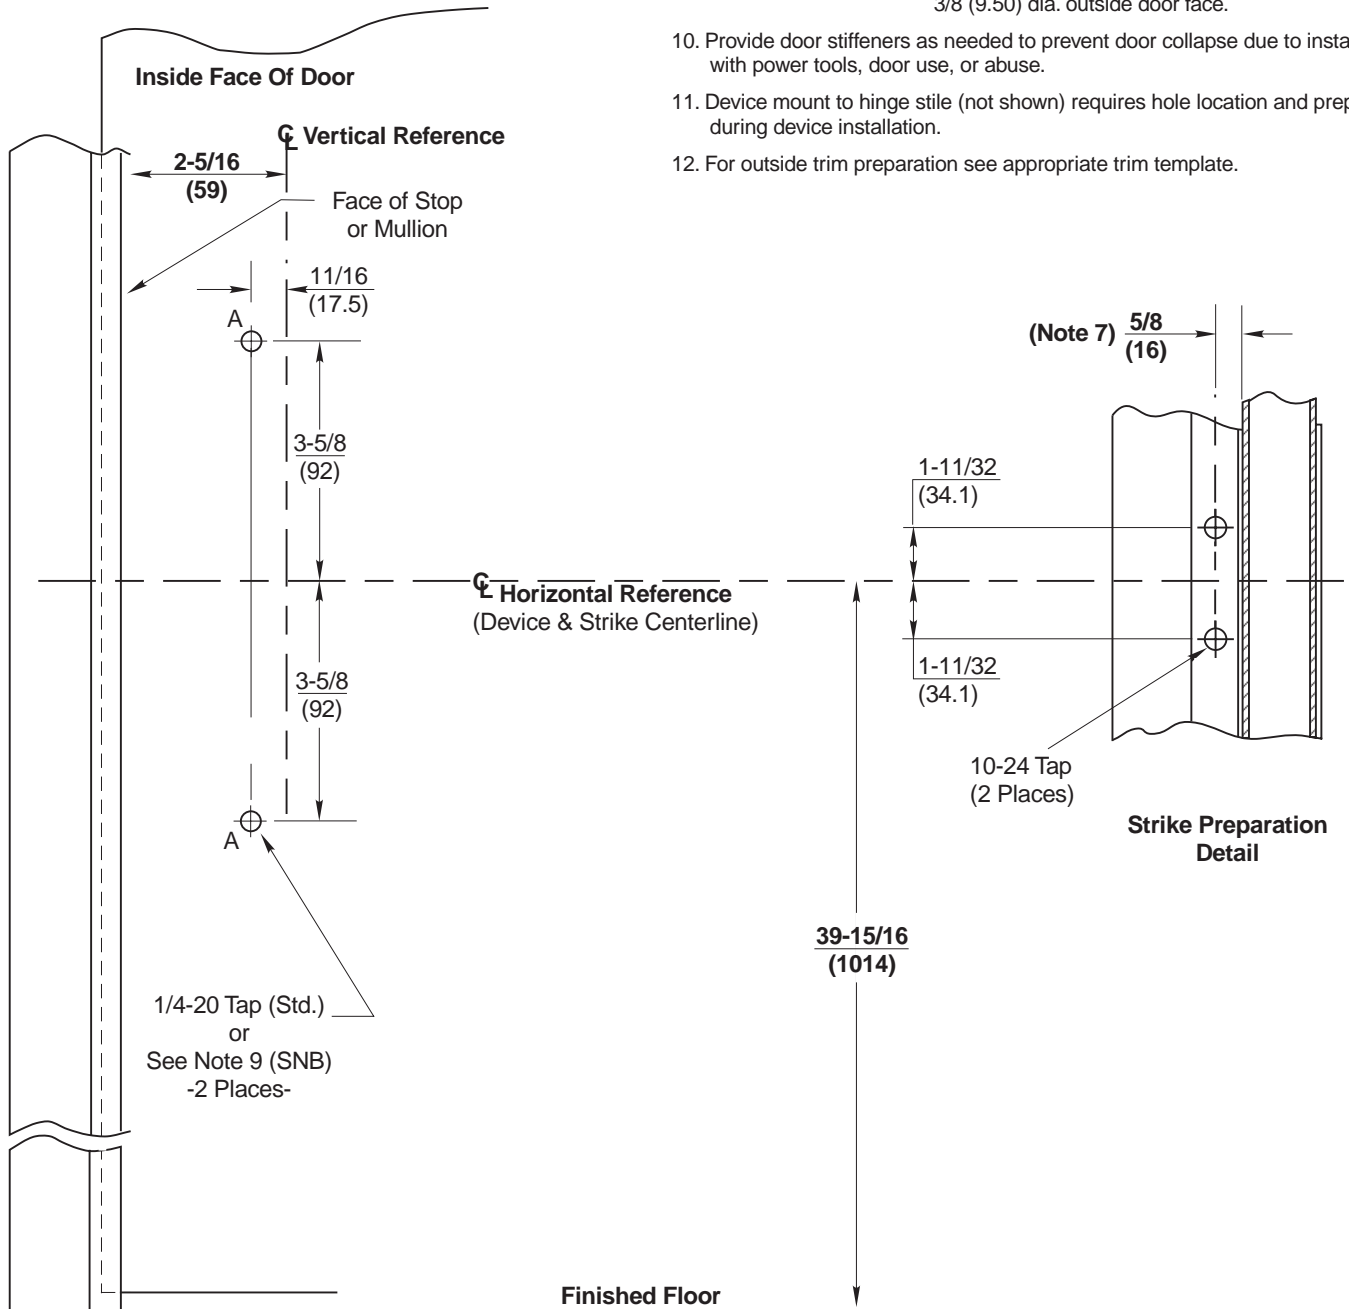

2100 Rim Panic Devices with 757 Strike
Application for Metal Door and Frame
or Mullion (Not for Fire Labeled Devices)

Yale
Yale Security Inc.

1902 Airport Road, Monroe, NC 28110

TEMPLATE NUMBER **7421-0000**

DATE **8-99**