




INCORRECT SURFACE PREPARATION MAY RESULT IN INCOMPLETE SETTING OF ADHESIVE CAUSING SEPARATION OF THE 726 SEAL FROM THE FRAME.

We recommend that installation take place after construction is completed, flooring material has been installed, and final cleaning has taken place.


Thoroughly clean door frame, removing dust, grease, dirt or other foreign materials. Use of isopropyl alcohol is recommended.

Cleansed surfaces should be allowed to dry before application. For best results, temperature should be between 50°F (10°C) and 100°F (38°C), ideally between 65°F (18°C) and 80°F (27°C).

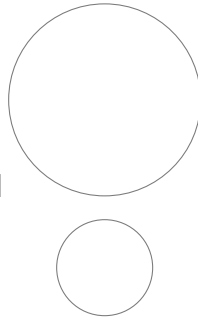

GASKETING MATERIAL
Intended for application up to 3 hours on hollow metal doors, and up to 1-1/2 hours on composite and wood core type doors.

1. Remove protective paper backing as you position 726, keeping weatherstrip adhesive free from foreign substances.
2. Apply to door frame in short sections by pressing firmly into place. Do not stretch product during installation.
3. If error is made during initial application, initial resetting is possible. Adhesive sets fully within 24 hours.

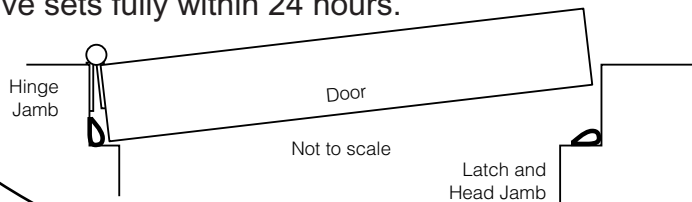

66990002