
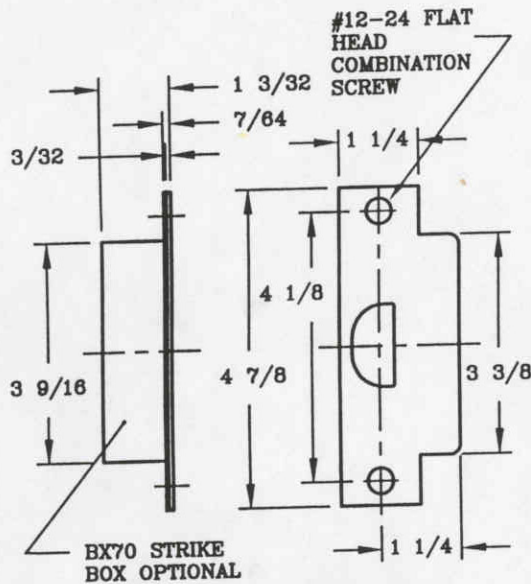


DOOR FRAME MANUFACTURER'S SHOULD PROVIDE THE REQUIRED CLEARANCE TO ALLOW BOLT TO ENTER STRIKE WHEN GASKETING OR SILENCERS ARE USED.


DEADLOCKING PLUNGER

FOR PROPER INSTALLATION DEAD-LOCKING PLUNGER ON LATCH BOLT MUST STOP AGAINST STRIKE.


DESCRIPTION	DIM'S	& L SERIES
BACKSET	A	2 3/8, 2 3/4, 3 3/4, 5
LATCH FRONT WIDTH	B	1 OR 1 1/8

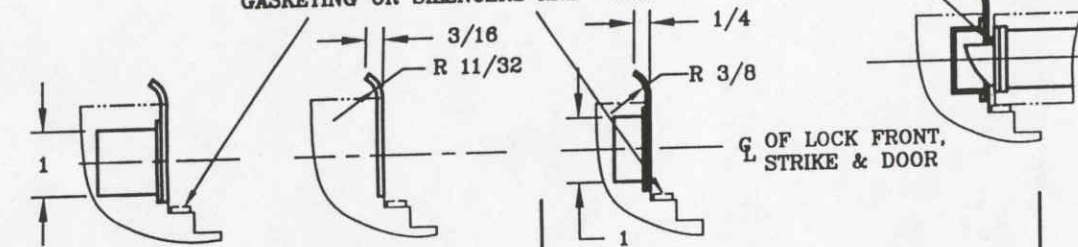


306 STRIKE

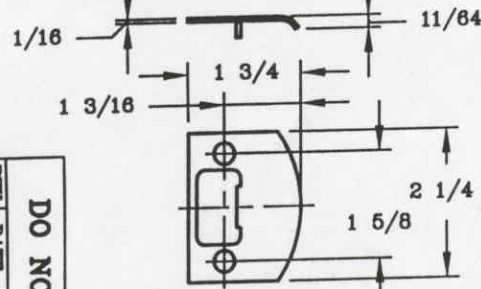

302 STRIKE

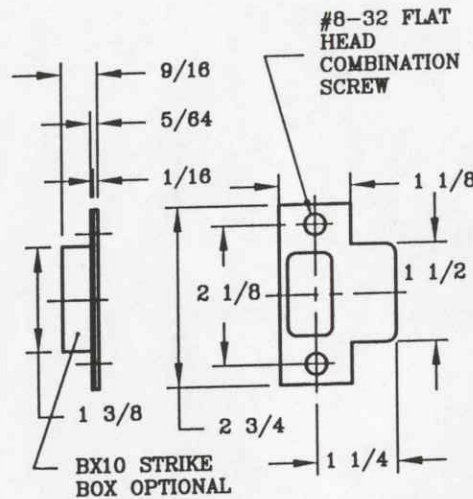

300 STRIKE

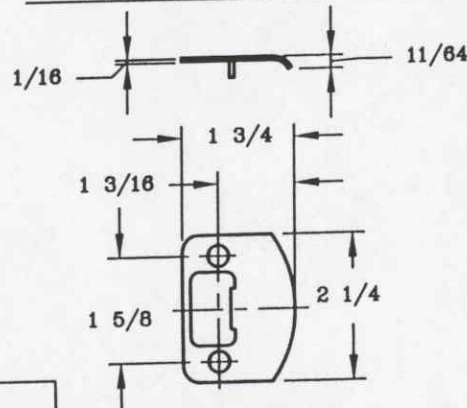


303 STRIKE

LATCH REQUIRES ϕ 7/8 HOLE

1/8 IN 2 BEVEL

STRAIT FRONT SHOWN

#8-32 FLAT HEAD COMBINATION SCREW

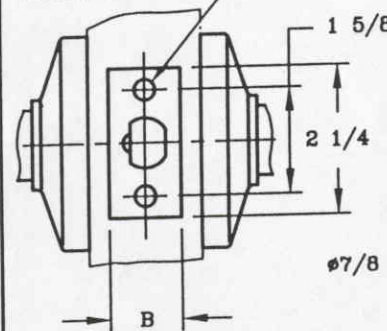


REINFORCEMENT BY DOOR MFG.

REINFORCEMENT BY DOOR MFG. TO SUPPORT LOCK AND LATCH IN CENTER OF DOOR TO PREVENT LATERAL MOVEMENT.

#6 SHEET METAL SGREWS AT INSTALLATION

ϕ 2 1/8

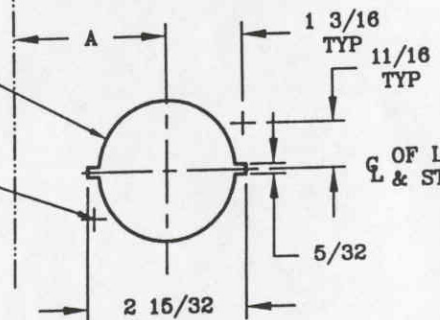

CUT OUT THRU DOOR

DO NOT SCALE
REV DATE
03.10.00
ML-001

ARROW TEMPLATE

PRODUCT
M & L SERIES LOCK (lever handle)